


Name & No Plate & Label Clip to be placed on the left hand side & of opposite corners.


The Underframe shows holes for Side & End Tee Stranchions, Side Rail Brackets & Floor Boards for High Sided Goods & Covered Goods Wagons.

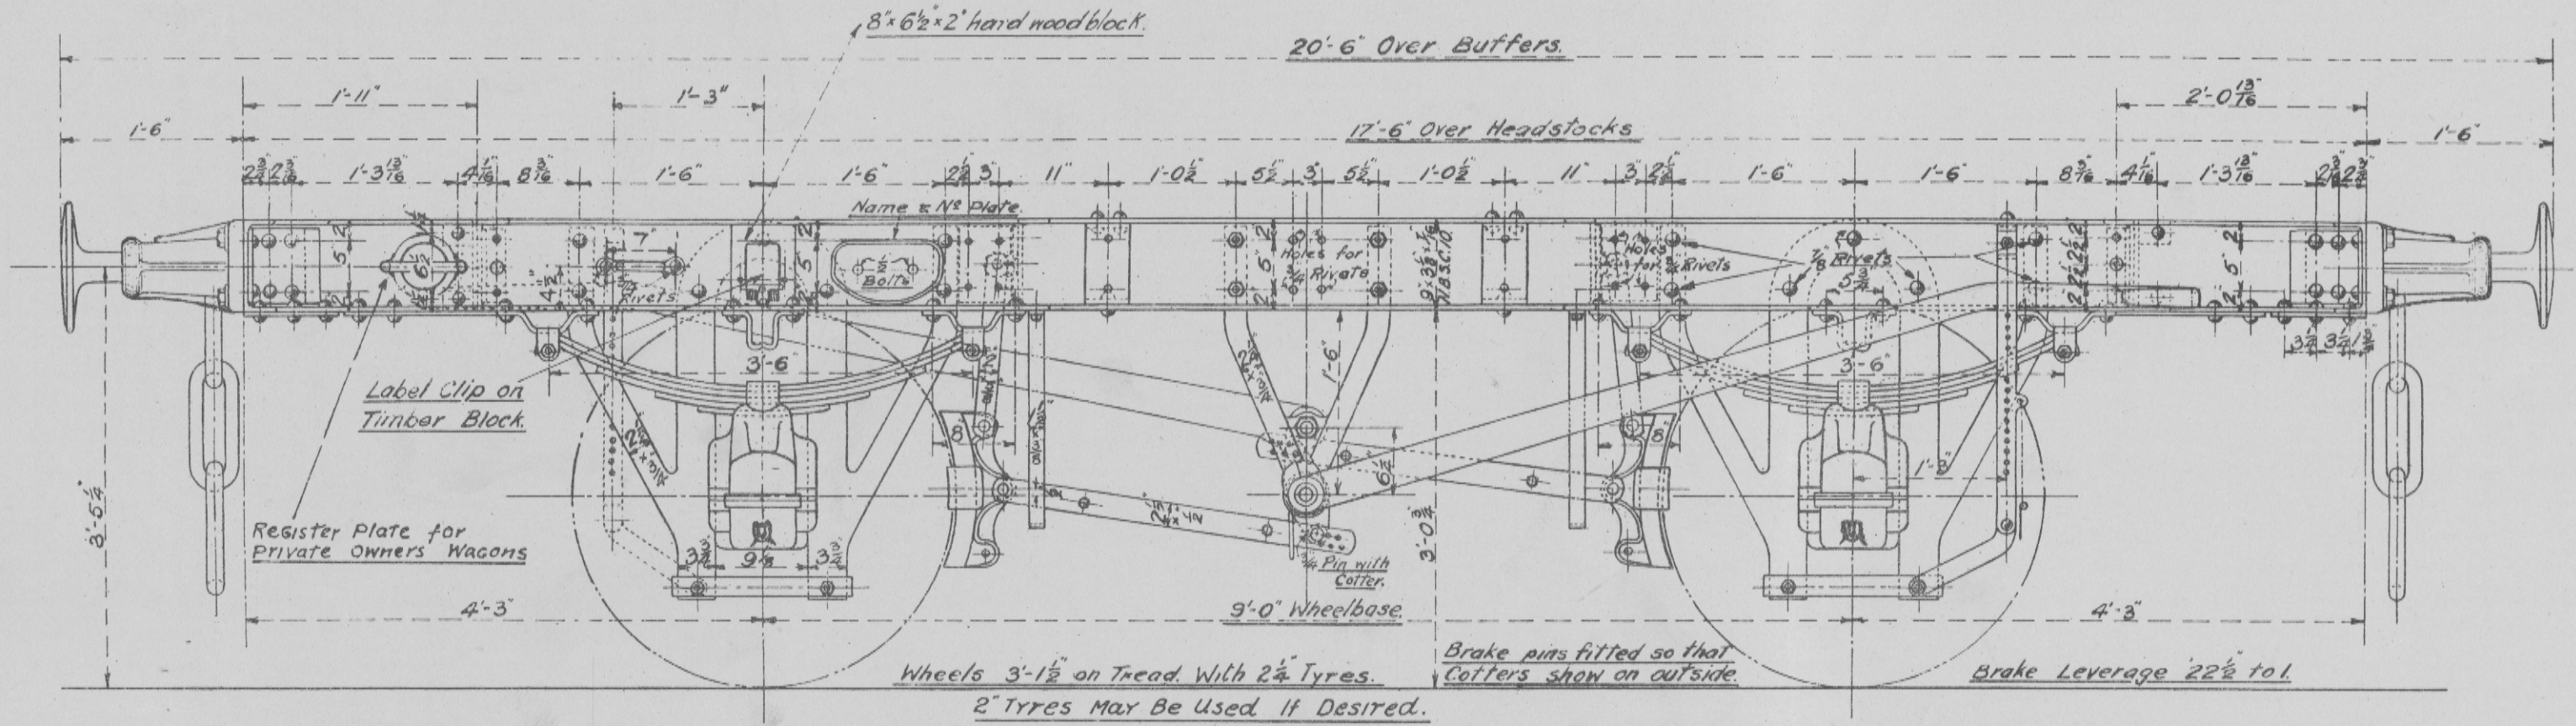


SIDE ELEVATION

If Preferred, Coke Wagons May Be Fitted With Double Drakes Instead Of The Morton Brake Shewn Hereon.

All Underframe members 9" x 3 1/2" x 7/8" N.B.S.C. 10. Holes marked thus + for 3/8" bolts are only necessary for Covered Goods Wagons with Timber bodies.

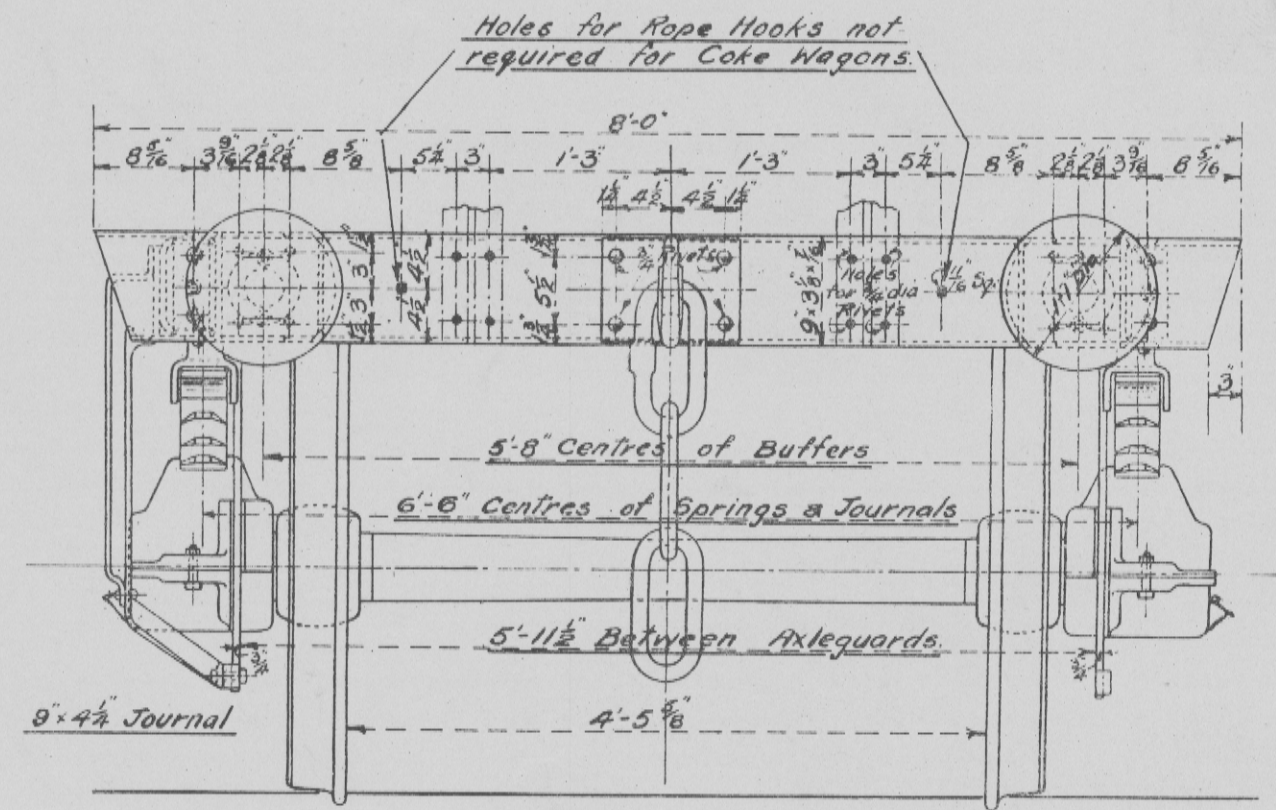

END ELEVATION

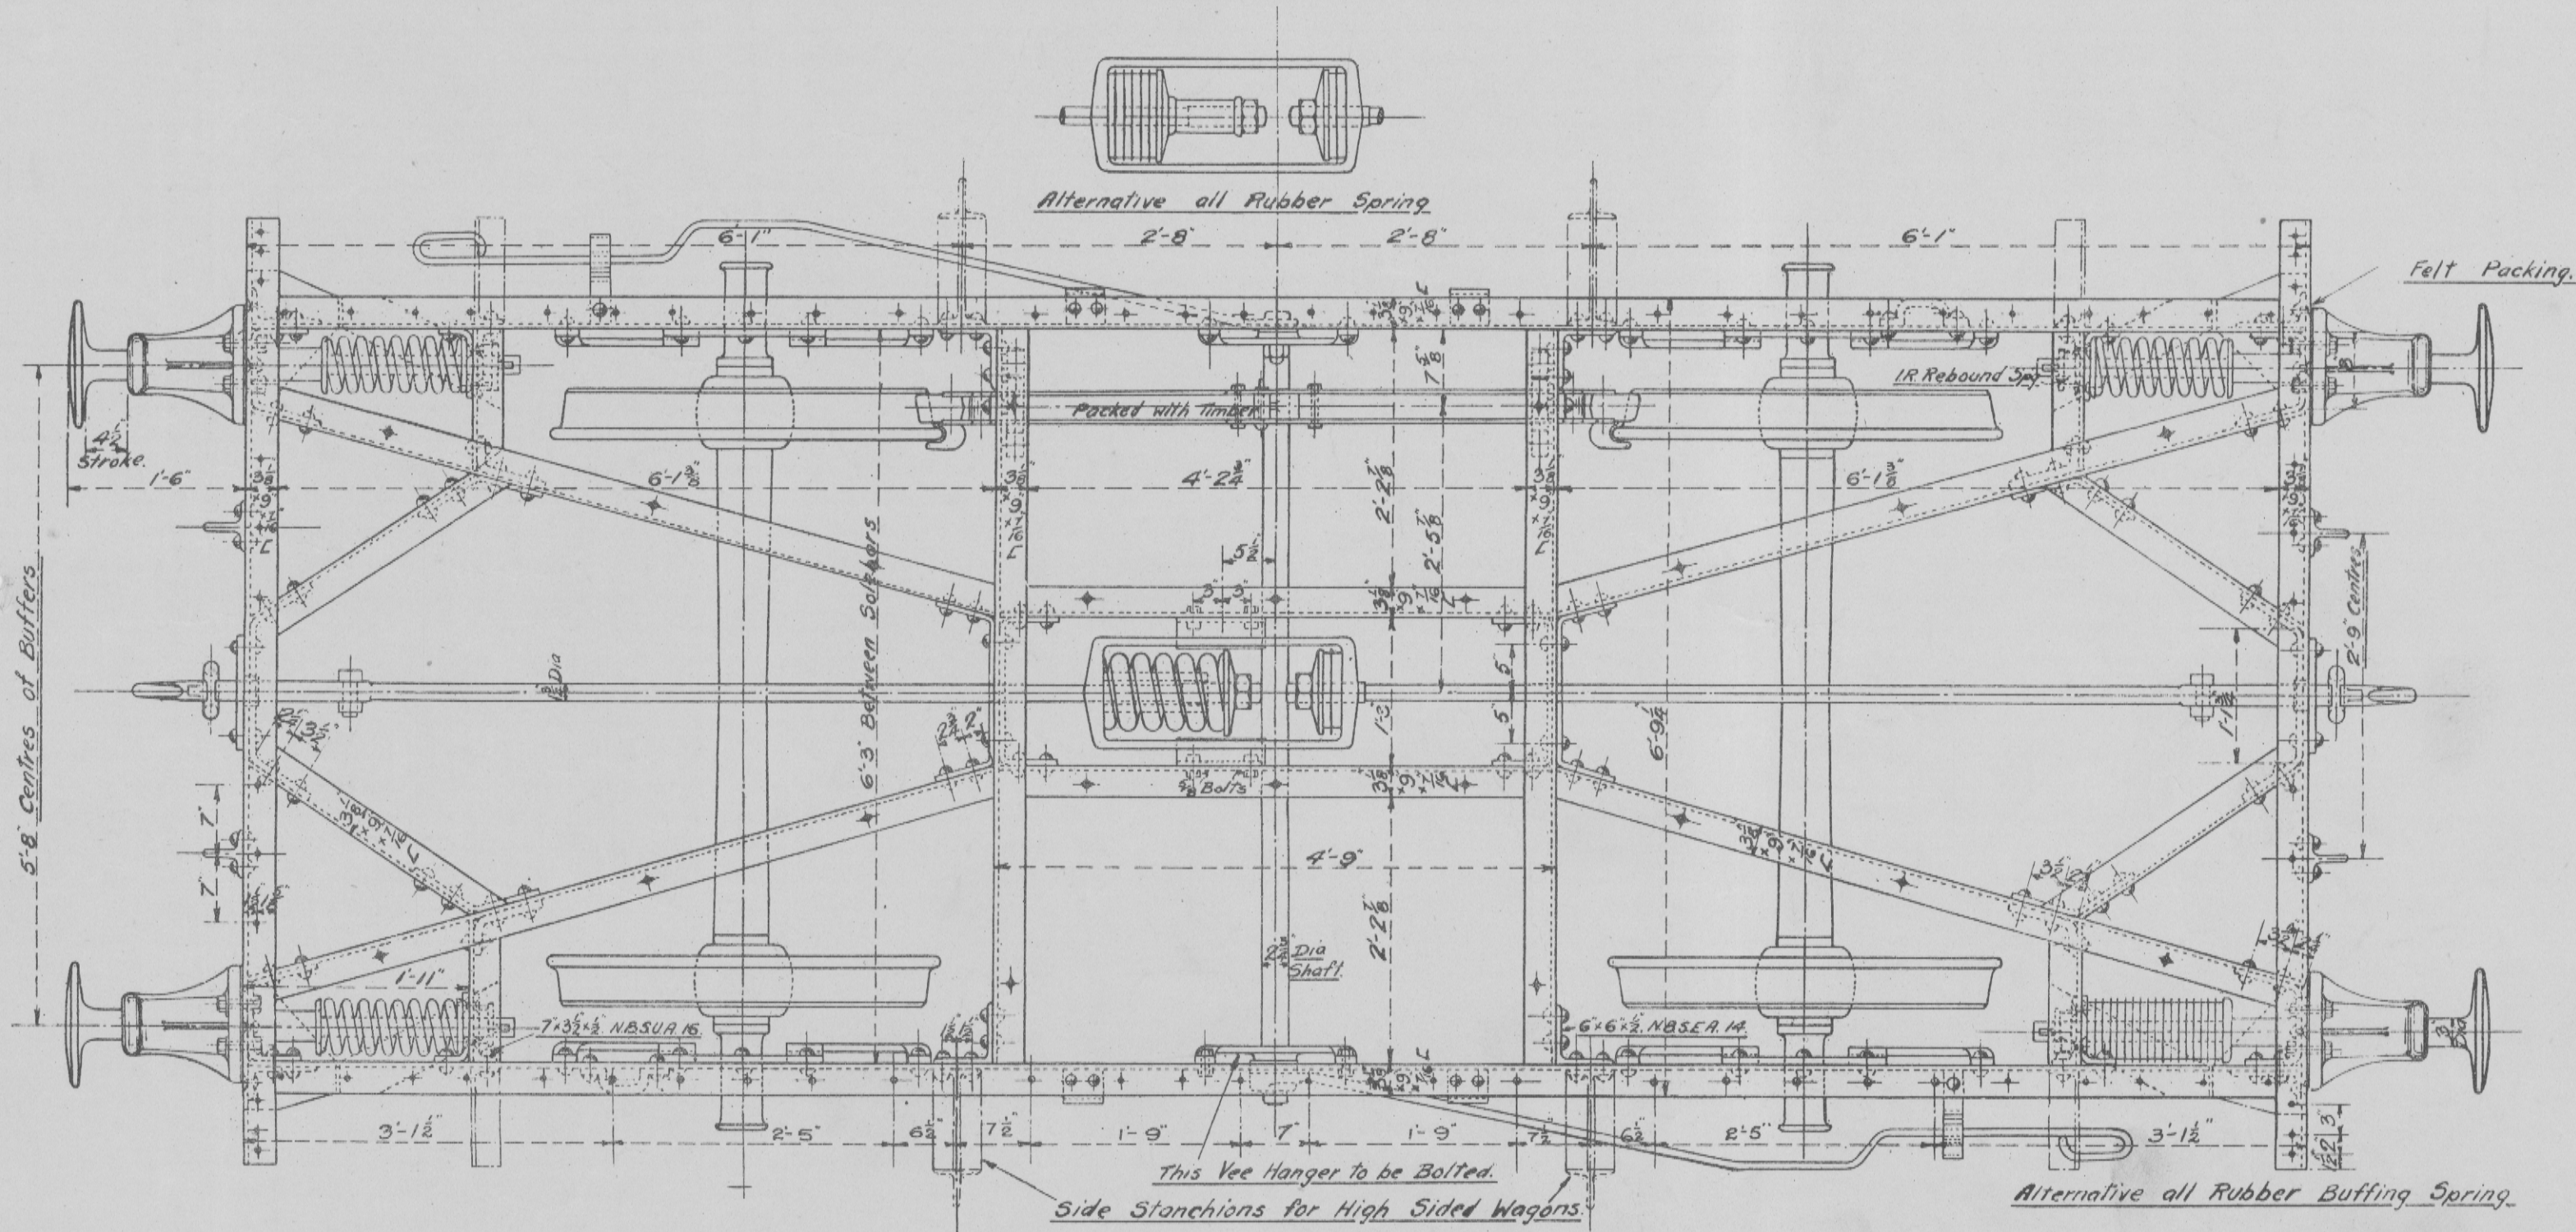

PLAN

ARRNT OF METAL UNDERFRAME FOR STANDARD 12 TON RAILWAY WAGON

ALSO FOR COKE WAGON

SCALE: 3/4 IN = 1 FOOT

APRIL 1923

D^C N^O 1001